


Technical Bulletin 05042016  
Charging/Turn ON Problem AT33/AT5

A situation has been reported where an AT5 would not turn on due to a low state of battery charge, and would not charge with the ATP supplied charger.

**Summary:** Customer found that the charging light on their AT5 would not come on and the battery would not charge. Eventually, the batteries discharged and the instrument could not be turned ON. It was discovered that the polarity of the tip is reversible and that it was installed incorrectly.

The fix is to pull the adaptor loose and verify the word “TIP” matches the (+) POS when connected. Verify charging light is illuminated on the instrument and let charge till its green.

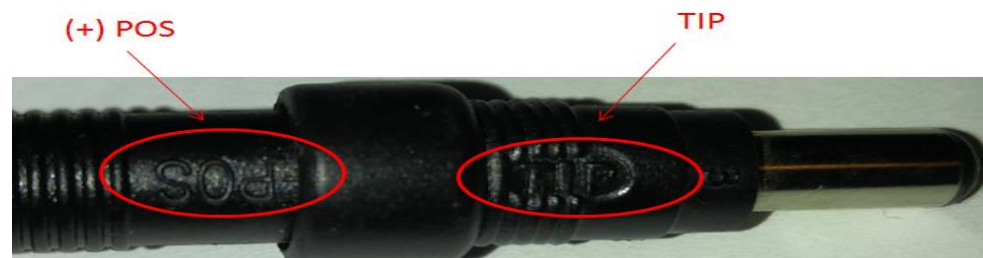

P.O. Box 1139 • Old Saybrook, CT 06475, USA

Phone: (860) 399-4222 • Fax: (860) 399-3180 • Email: [info@alltestpro.com](mailto:info@alltestpro.com) • Web Site: [www.alltestpro.com](http://www.alltestpro.com)